




# Installation manual

## VRV IV heat exchanger unit for indoor installation

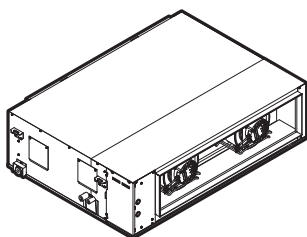



# Table of Contents

|          |                                                                        |          |
|----------|------------------------------------------------------------------------|----------|
| <b>1</b> | <b>About the documentation</b>                                         | <b>3</b> |
| 1.1      | About this document.....                                               | 3        |
| <b>2</b> | <b>About the box</b>                                                   | <b>3</b> |
| 2.1      | Heat exchanger unit .....                                              | 3        |
| 2.1.1    | To remove the accessories from the heat exchanger unit .....           | 3        |
| <b>3</b> | <b>About the units and options</b>                                     | <b>3</b> |
| 3.1      | About the compressor unit and heat exchanger unit.....                 | 3        |
| 3.2      | System layout.....                                                     | 4        |
| 3.3      | Combining units and options .....                                      | 4        |
| 3.3.1    | Possible options for the compressor unit and heat exchanger unit ..... | 4        |
| <b>4</b> | <b>Preparation</b>                                                     | <b>4</b> |
| 4.1      | Preparing installation site .....                                      | 4        |
| 4.1.1    | Installation site requirements of the heat exchanger unit .....        | 4        |
| 4.2      | Preparing electrical wiring .....                                      | 4        |
| 4.2.1    | Safety device requirements .....                                       | 4        |
| <b>5</b> | <b>Installation</b>                                                    | <b>5</b> |
| 5.1      | Opening the units .....                                                | 5        |
| 5.1.1    | To open the switch box cover of the heat exchanger unit .....          | 5        |
| 5.2      | Mounting the heat exchanger unit .....                                 | 5        |
| 5.2.1    | Guidelines when installing the heat exchanger unit....                 | 5        |
| 5.2.2    | Guidelines when installing the ducting.....                            | 5        |
| 5.2.3    | Guidelines when installing the drain piping.....                       | 6        |
| 5.3      | Connecting the refrigerant piping .....                                | 6        |
| 5.3.1    | To connect the refrigerant piping to the heat exchanger unit .....     | 6        |
| 5.4      | Connecting the electrical wiring.....                                  | 7        |
| 5.4.1    | Field wiring: Overview .....                                           | 7        |
| 5.4.2    | Guidelines when connecting the electrical wiring .....                 | 7        |
| 5.4.3    | To connect the electrical wiring on the heat exchanger unit .....      | 7        |
| <b>6</b> | <b>Technical data</b>                                                  | <b>8</b> |
| 6.1      | Wiring diagram: Heat exchanger unit .....                              | 8        |

## 1 About the documentation

### 1.1 About this document

#### Target audience

Authorised installers



#### INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

#### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you must read before installing
  - Format: Paper (in the accessory bag of the compressor unit)

- **Compressor unit installation and operation manual:**
  - Installation and operation instructions
  - Format: Paper (in the accessory bag of the compressor unit)
- **Heat exchanger unit installation manual:**
  - Installation instructions
  - Format: Paper (in the accessory bag of the heat exchanger unit)
- **Installer and user reference guide:**
  - Preparation of the installation, technical specifications, reference data,...
  - Detailed step-by-step instructions and background information for basic and advanced usage
  - Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>


Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

## 2 About the box

### 2.1 Heat exchanger unit

#### 2.1.1 To remove the accessories from the heat exchanger unit

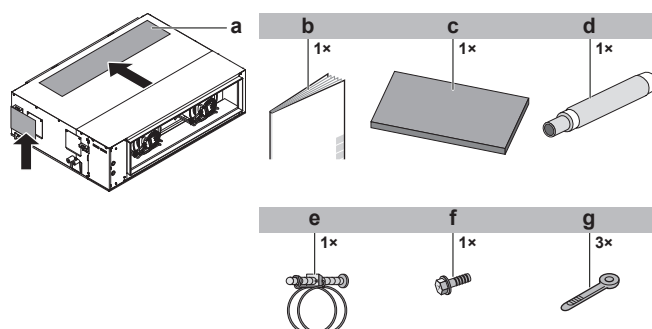

- a Optional filter for debris
- b Heat exchanger unit installation manual
- c Sealing pad
- d Drain hose
- e Metal clamp
- f Screw (for shield of transmission wiring)
- g Cable tie

## 3 About the units and options

### 3.1 About the compressor unit and heat exchanger unit

The compressor unit and heat exchanger unit are intended for indoor installation and aimed for air to air heat pump applications.

| Specification                      |         | RKXYQ5+RDXYQ5 |
|------------------------------------|---------|---------------|
| Maximum capacity                   | Heating | 16 kW         |
|                                    | Cooling | 14 kW         |
| Outside ambient design temperature | Heating | -20~15.5°C WB |
|                                    | Cooling | -5~46°C DB    |

## 4 Preparation


| Specification                                                         | RKXYQ5+RDXYQ5          |
|-----------------------------------------------------------------------|------------------------|
| Ambient design temperature of compressor unit and heat exchanger unit | 5~35°C DB<br>(26°C WB) |

### 3.2 System layout



#### NOTICE

Design of the system must not be done at temperatures below -15°C.

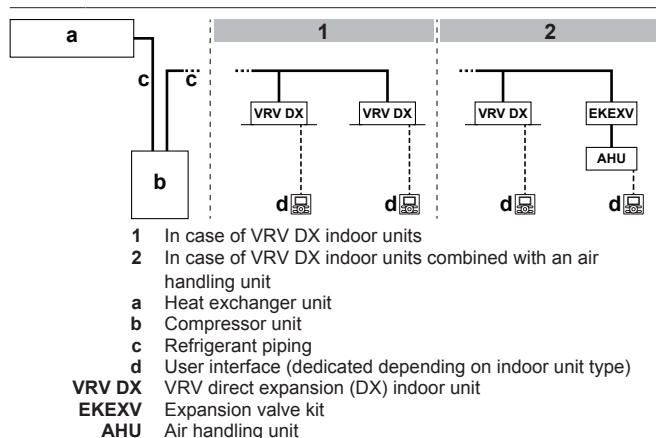

### 3.3 Combining units and options

#### 3.3.1 Possible options for the compressor unit and heat exchanger unit

For more possible options, see the installer and user reference guide.

##### Drain pan heater (EKDPH1RDX)

- **When.** Installation is optional. It is recommended in areas where the outside temperature is below -7°C for more than 24 hours continuously.
- **Where.** Install the drain pan heater in the heat exchanger unit.
- **How.** See the installation instructions delivered with the drain pan heater.

##### Filter for debris (delivered as accessory)


- **When.** Installation is optional. It is recommended in places where a lot of debris or dirt (example: leaves) can go into the suction ducting.
- **Where.** Install the filter in one of the following places:
  - Suction opening of the heat exchanger unit
  - Suction ducting (easier for maintenance)
- **How.** See the installation instructions attached to the filter.
- **Pressure drop over the filter:** 30 Pa at 60 m³/min

## 4 Preparation

### 4.1 Preparing installation site

#### 4.1.1 Installation site requirements of the heat exchanger unit

- **Service space.** Mind the following requirements:

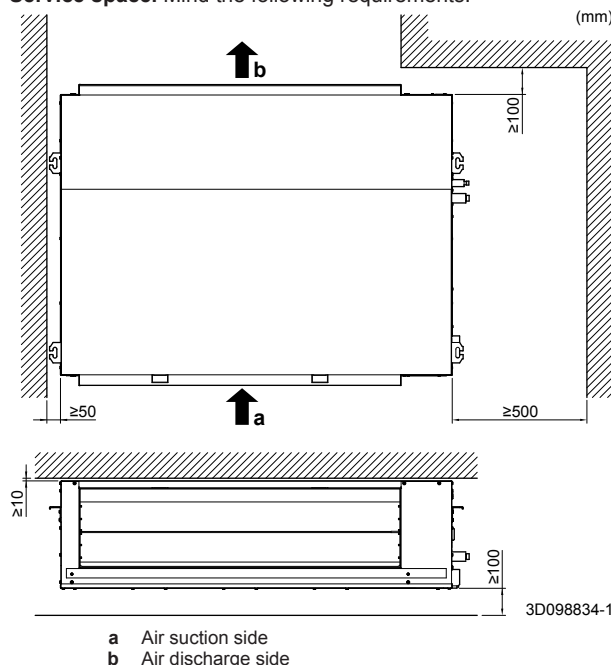

#### NOTICE

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### 4.2 Preparing electrical wiring

#### 4.2.1 Safety device requirements



#### NOTICE

When using residual current operated circuit breakers, be sure to use a high-speed type 300 mA rated residual operating current.

##### Power supply: Heat exchanger unit

The power supply must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage protector in accordance with the applicable legislation.

Selection and sizing of the wiring should be done in accordance with the applicable legislation based on the information mentioned in the table below.

| Model  | Minimum circuit ampacity | Recommended fuses |
|--------|--------------------------|-------------------|
| RDXYQ5 | 4.6 A                    | 10 A              |

- Phase and frequency: 1~ 50 Hz
- Voltage: 220-240 V

##### Transmission wiring

Transmission line section:


|                                                                                                                                       |                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Transmission wiring                                                                                                                   | Sheathed + shielded cable (2 wires)<br>Vinyl cords<br>0.75~1.25 mm <sup>2</sup> |
| Maximum wiring length<br>(= distance between compressor unit and furthest indoor unit)                                                | 300 m                                                                           |
| Total wiring length<br>(= distance between compressor unit and all indoor units, and between compressor unit and heat exchanger unit) | 600 m                                                                           |

If the total transmission wiring exceeds these limits, it may result in communication error.

## 5 Installation

### 5.1 Opening the units

#### 5.1.1 To open the switch box cover of the heat exchanger unit

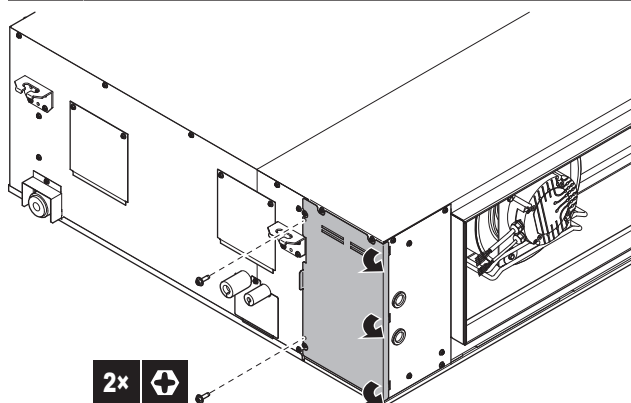

### 5.2 Mounting the heat exchanger unit


#### 5.2.1 Guidelines when installing the heat exchanger unit




#### INFORMATION

**Optional equipment.** When installing optional equipment, also read the installation manual of the optional equipment. Depending on the field conditions, it might be easier to install the optional equipment first.

- **Suspension bolts.** Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the unit. If there is a risk, reinforce the ceiling before installing the unit. Attach the hanger bracket to the suspension bolt. Fix it securely by using a nut and washer from the upper and lower sides of the hanger bracket.

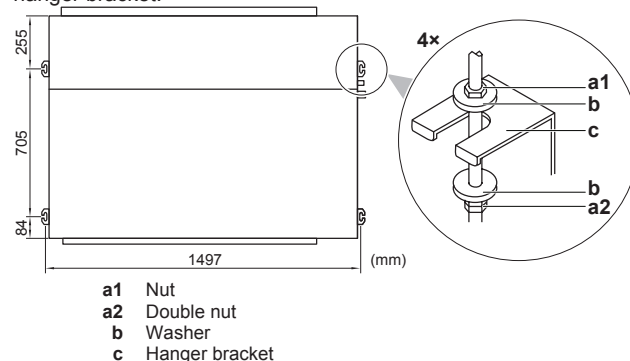


- **Drain water flow.** Make sure drain water flows to the drain pipe connection.

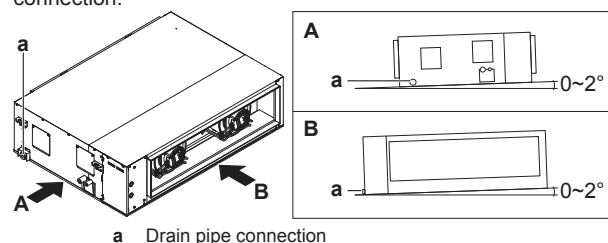


#### 5.2.2 Guidelines when installing the ducting

The ducting is to be field supplied.

- **Slope.** Make sure the ducting slopes down to prevent water from flowing into the heat exchanger unit.

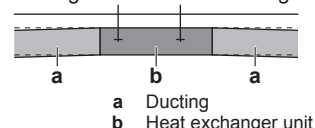

- **Grills.** Install grills in the suction ducting entrance and the discharge ducting exit to prevent animals and debris from going into the ducting.
- **Service holes.** Put service holes in the ducting to make maintenance easier.
- **Thermal insulation.** Insulate the ducting against thermal losses to prevent sweat (during heating operation), and to prevent overheating of the building (during cooling operation).
- **Sound insulation.** Insulate the ducting against noise, especially in sound-sensitive areas. **Example:** Sound-absorbing ducting; sound-absorbing baffle in the ducting.
- **Air leaks.** Wind aluminium tape around the connection between the heat exchanger unit and the ducting. Make sure there are no air leaks between the ducting and the heat exchanger unit, and at any other connection. This to prevent sweat, overheating and sound problems.

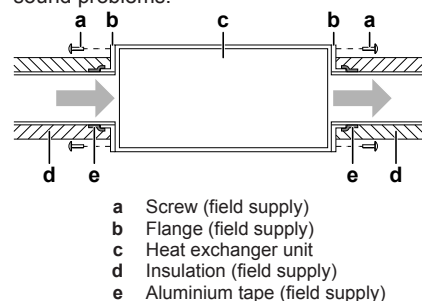

## 5 Installation

- **Reverse airflow.** Protect the ducting against reverse airflow from wind.


### 5.2.3 Guidelines when installing the drain piping

Make sure condensation water can be evacuated properly. This involves:


- General guidelines
- Connecting the drain piping to the heat exchanger unit
- Installing a drain pump and drain reservoir
- Checking for water leaks

#### General guidelines


- **Pipe length.** Keep drain piping as short as possible.
- **Pipe size.** Keep the pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 25 mm nominal diameter and 32 mm outer diameter).
- **Slope.** Make sure the drain piping slopes down (at least 1/100) to prevent air from being trapped in the piping. Use hanging bars as shown.

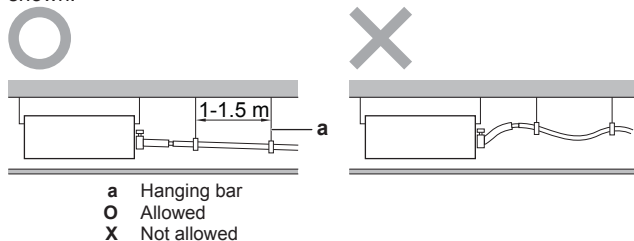

- **Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.
- **Bad odours.** To prevent bad odours, you can install a trap.

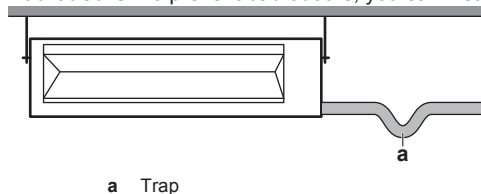

- **Combining drain pipes.** You can combine drain pipes. Make sure to use drain pipes and T-joints with a correct gauge for the operating capacity of the units.

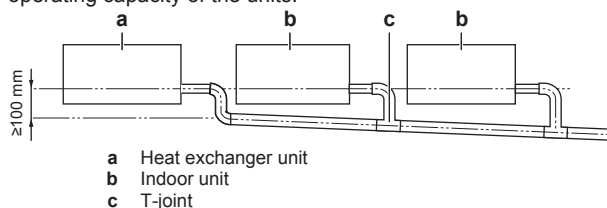


#### To connect the drain piping to the heat exchanger unit



#### NOTICE

Incorrect connection of the drain hose might cause leaks, and damage the installation space and surroundings.

- 1 Push the drain hose as far as possible over the drain pipe connection.
- 2 Tighten the metal clamp until the screw head is less than 4 mm from the metal clamp part.
- 3 Wind the sealing pad (= insulation) around the metal clamp and drain hose, and fix it with cable ties.
- 4 Connect the drain piping to the drain hose.

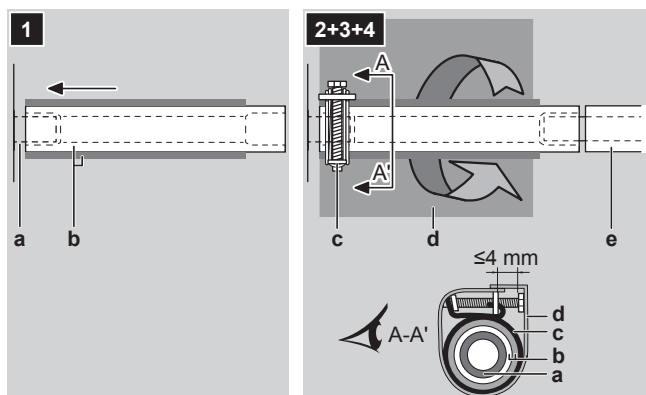


- a Drain pipe connection (attached to the unit)
- b Drain hose (accessory)
- c Metal clamp (accessory)
- d Sealing pad (accessory)
- e Drain piping (field supply)

#### Guidelines when installing a drain pump and drain reservoir

If you install a drain pump, you must also install a drain reservoir. The drain pump and drain reservoir are to be field supplied.

- **Drain pump:**
  - **Minimum flow rate:** 45 l/h
  - **Feedback contact.** You can connect a contact that gives the status of the drain pump to the heat exchanger unit. The heat pump uses this contact as an input.

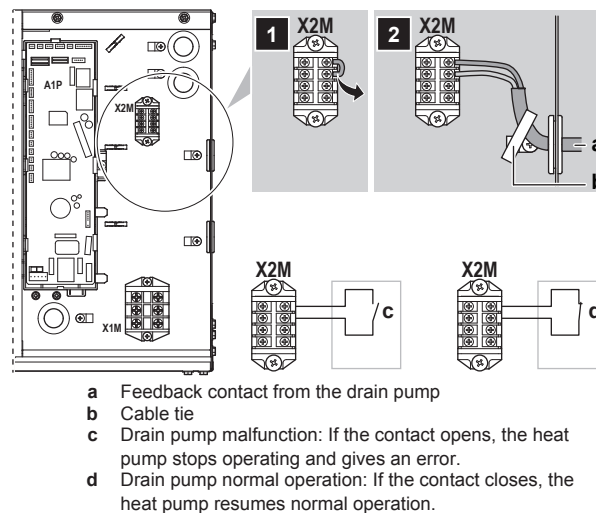

- **Drain reservoir:**
  - **Minimum volume:** 3 l
  - **Best practice:** Use a drain reservoir with a float switch that gives an ON/OFF signal to the drain pump.

#### To check for water leaks

Gradually put approximately 1 l of water in the drain pan, and check for water leaks.

### 5.3 Connecting the refrigerant piping





#### DANGER: RISK OF BURNING

#### 5.3.1 To connect the refrigerant piping to the heat exchanger unit

- 1 Remove the cover.
- 2 Remove the 2 insulation pieces.

- 3 Put a wet cloth in front of the EPS to protect the drain pan.
- 4 Braze the liquid and gas piping.
- 5 Remove the wet cloth.
- 6 Put back the 2 insulation pieces, peel off the insulation tapes and adhere them to the insulation pieces.
- 7 Reattach the cover.

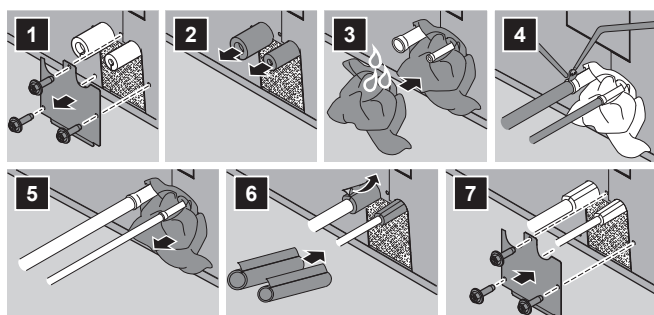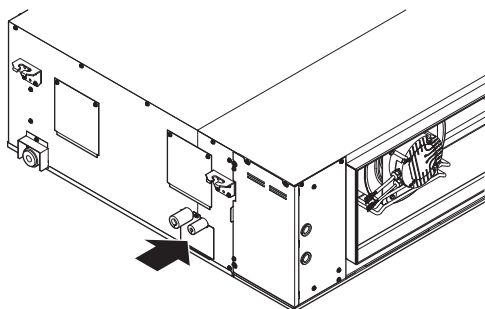


## 5.4 Connecting the electrical wiring

### 5.4.1 Field wiring: Overview

Field wiring consists of:


- Power supply (always including earth)
- Communication (= transmission) wiring between the compressor unit, the heat exchanger unit, and the indoor units.

**Example:**

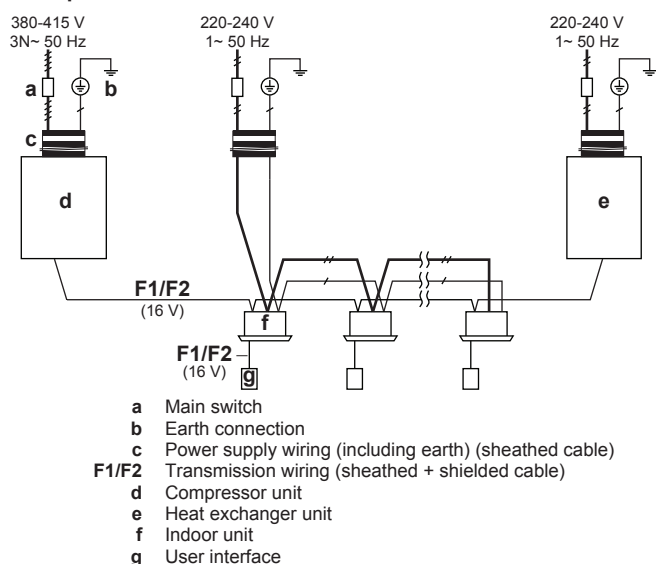

#### Branches

No branching is allowed after branching.

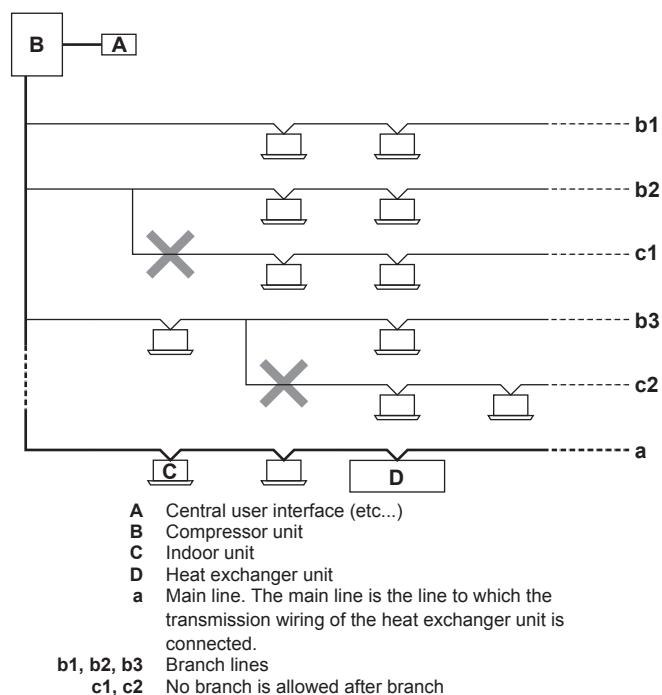

### 5.4.2 Guidelines when connecting the electrical wiring

#### Tightening torques

| Wiring                                                  | Screw size | Tightening torque (N•m) |
|---------------------------------------------------------|------------|-------------------------|
| Power supply wiring<br>(power supply + shielded ground) | M5         | 2.0~3.0                 |
| Transmission wiring                                     | M3.5       | 0.8~0.97                |

### 5.4.3 To connect the electrical wiring on the heat exchanger unit





#### NOTICE


- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.

- 1 Remove the service cover.
- 2 Connect the transmission wiring as follows:


## 6 Technical data

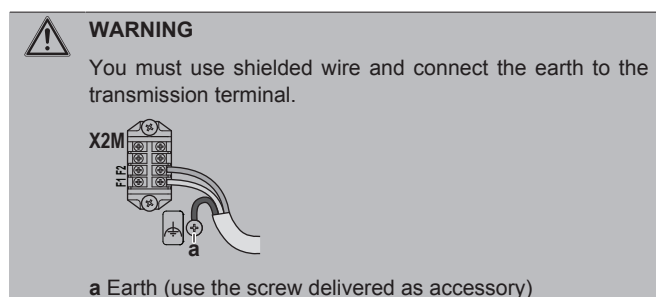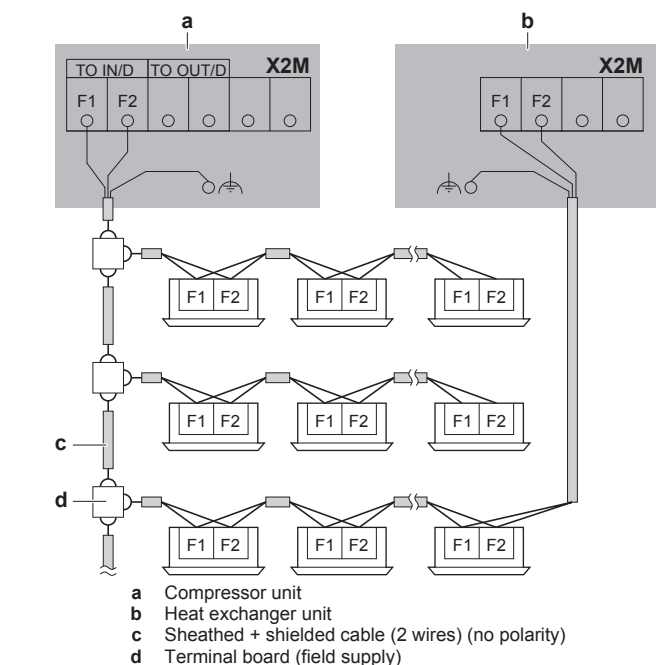

3 Connect the power supply as follows:

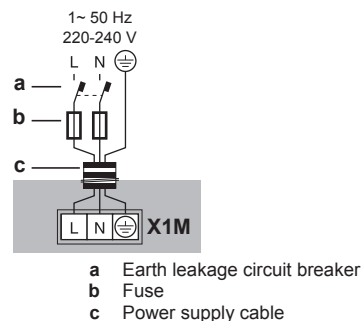

4 Route the wiring through the frame, and fix the cables (power supply and transmission wiring) with cable ties.

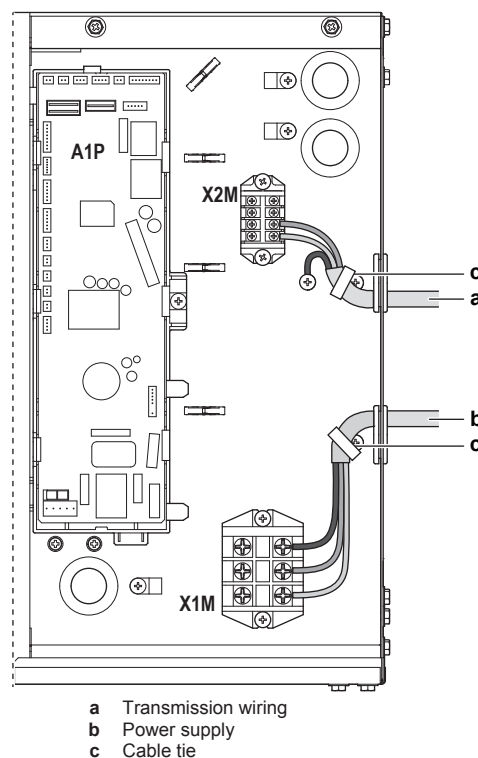

## 6 Technical data

Latest information can be found in the technical engineering data.

### 6.1 Wiring diagram: Heat exchanger unit

The wiring diagram is delivered with the unit, located at the inside of the switch box cover.

#### Symbols:

X1M Main terminal  
----- Earth wiring  
15 Wire number 15

----- Field wire  
Field cable

→ \*\*/12.2 Connection \*\* continues on page 12 column 2

① Several wiring possibilities

Option

Not mounted in switch box



Wiring depending on model



PCB

#### Legend for wiring diagram RDXYQ5:

|      |                                              |
|------|----------------------------------------------|
| A1P  | Printed circuit board (main)                 |
| C1   | Capacitor (A1P)                              |
| E1H  | Drain pan heater (optional)                  |
| F1U  | Fuse (T 6.3 A / 250 V) (A1P)                 |
| HAP  | Running LED (service monitor green) (A1P)    |
| K1a  | Auxiliary relay (optional)                   |
| M*F  | Motor (fan)                                  |
| Q1DI | Earth leakage circuit breaker (field supply) |
| PS   | Switching power supply (A1P)                 |
| R1T  | Thermistor (air)                             |
| R2T  | Thermistor (gas)                             |
| R3T  | Thermistor (coil)                            |
| V1R  | Diode module (A1P)                           |
| X1M  | Terminal strip (power supply)                |

|     |                                      |
|-----|--------------------------------------|
| X2M | Terminal strip (transmission wiring) |
| X*M | Terminal strip                       |
| Y1E | Electronic expansion valve           |
| Z1C | Noise filter (ferrite core)          |
| Z1F | Noise filter (A1P)                   |

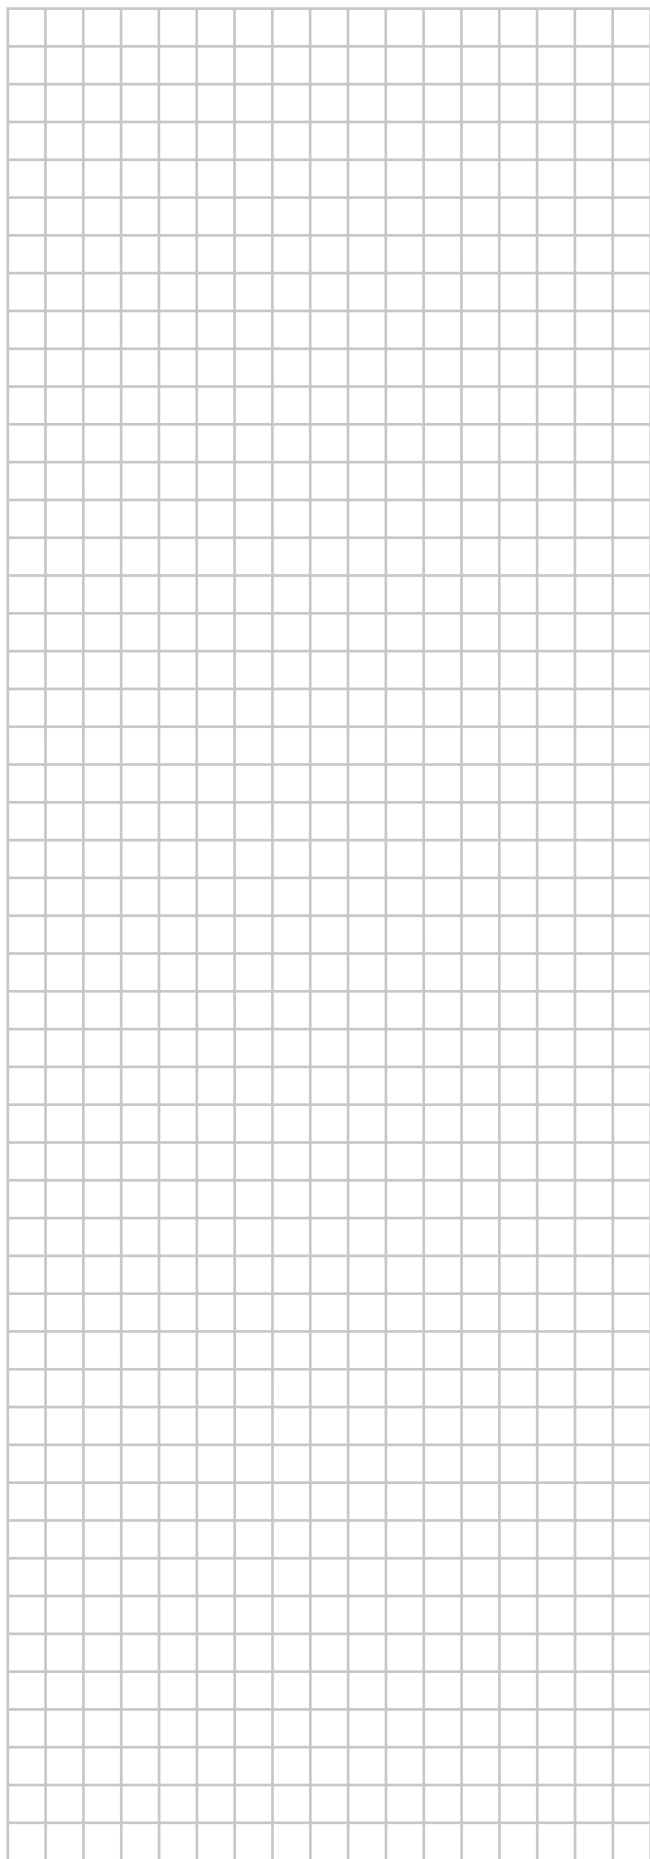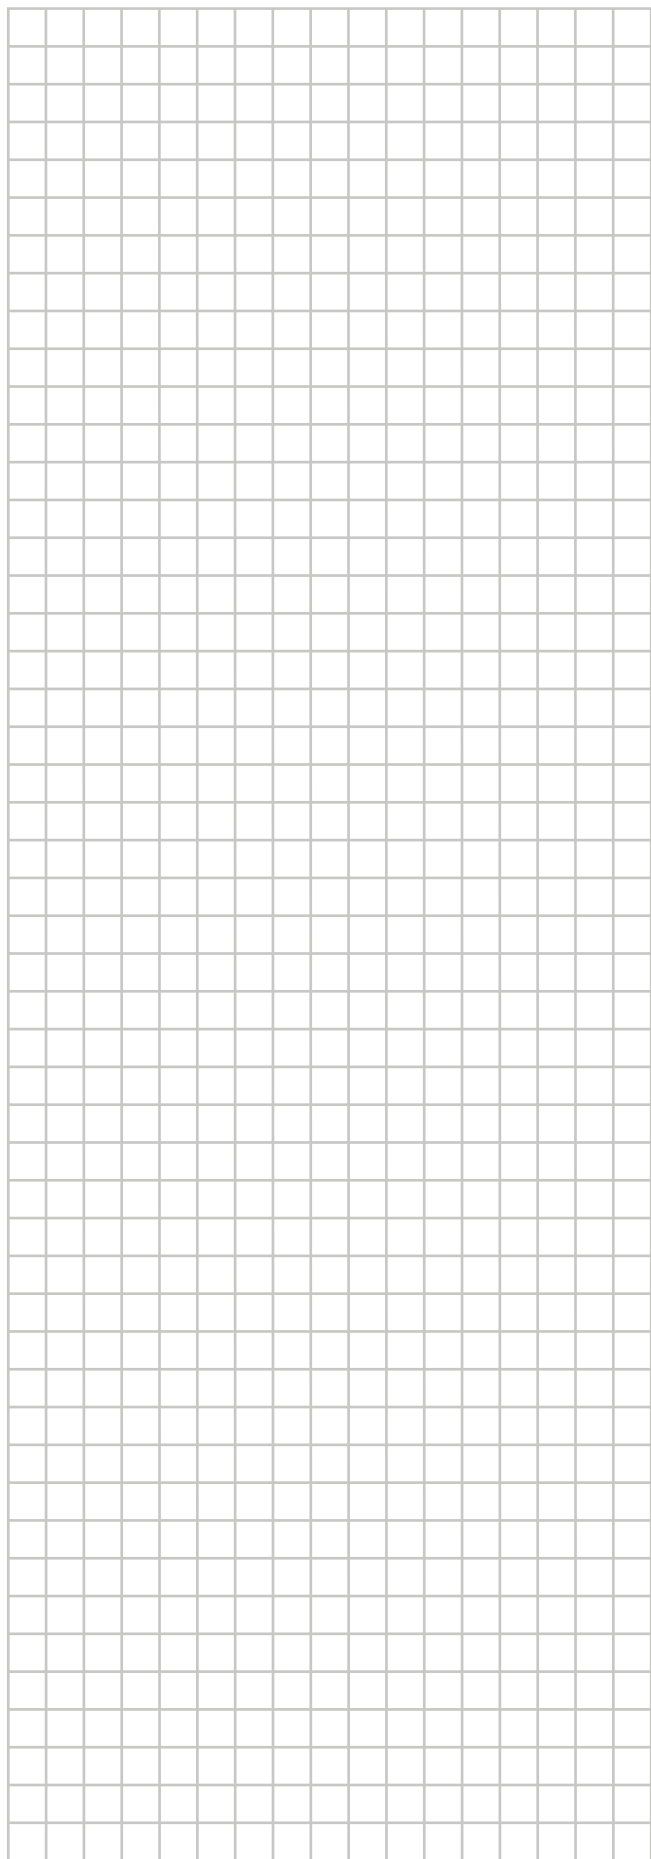

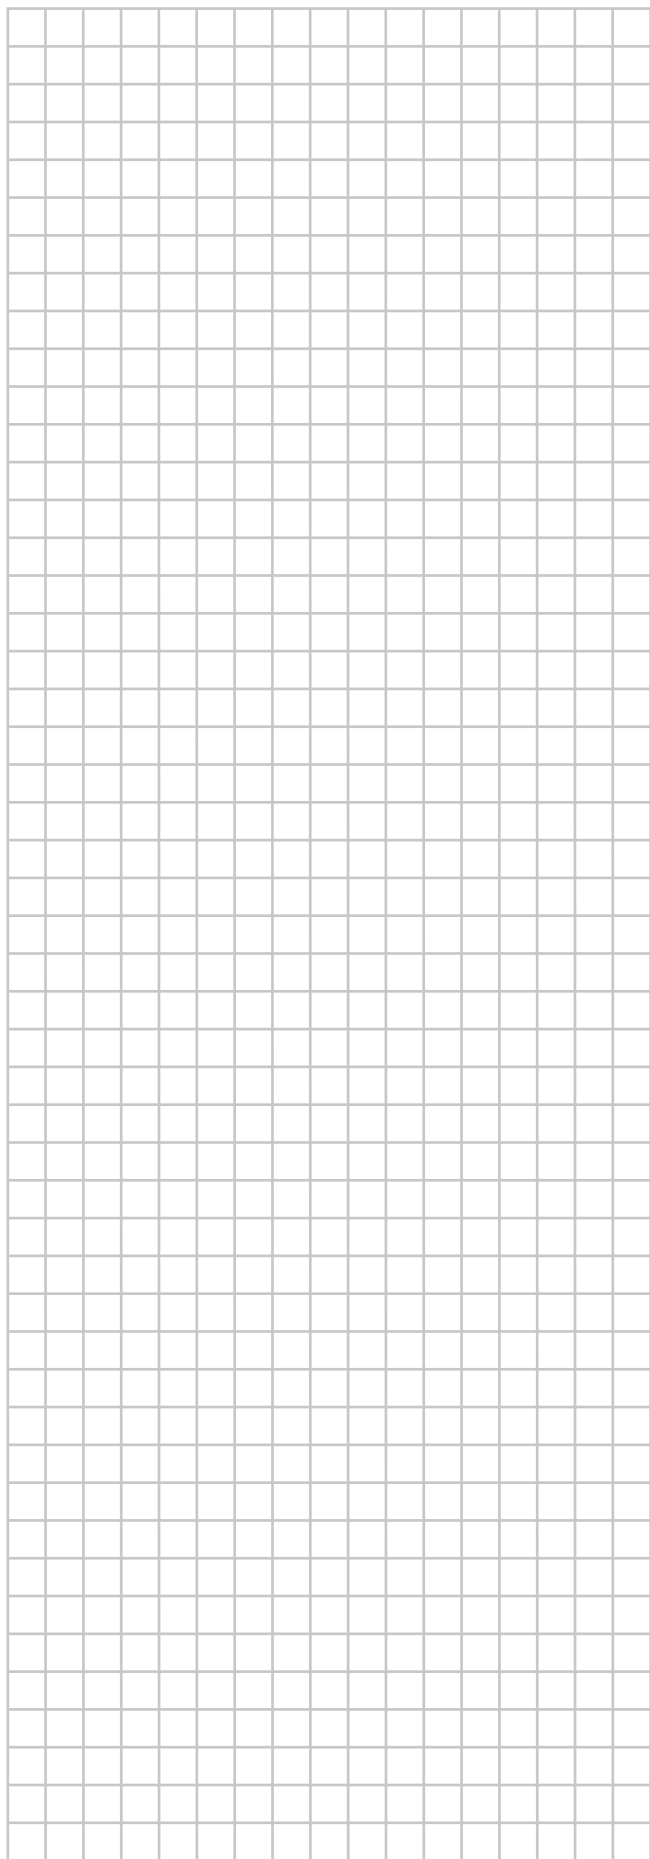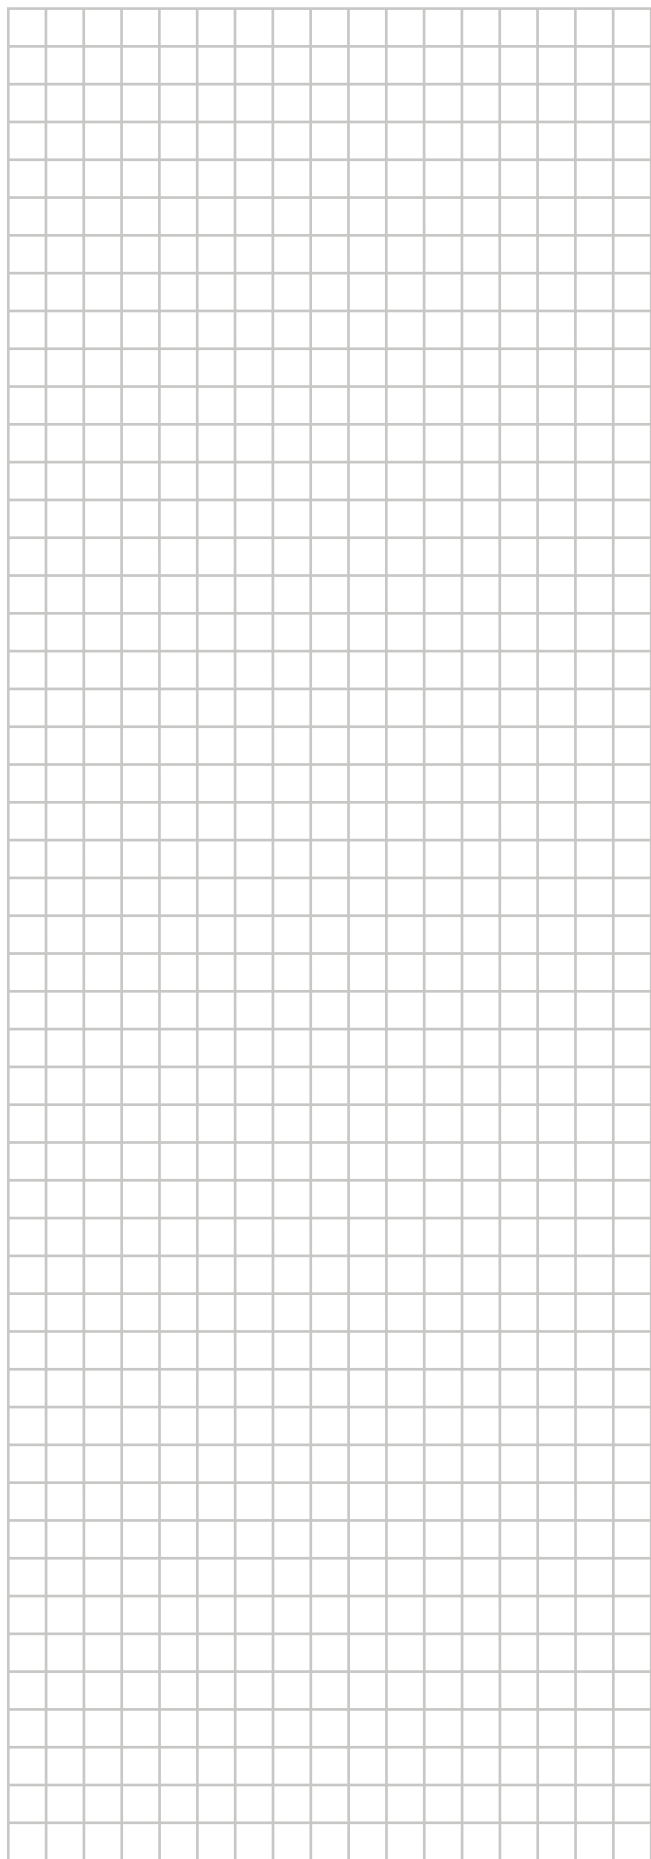

ERC



4P408444-1 0000000M

Copyright 2015 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P408444-1 2015.07